



FREESTANDING ELECTRIC MODULE (GAS HOB)

User Guide & Installation Instructions

REMEMBER, when replacing a part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

DO NOT use reconditioned or copy parts that have not been clearly authorised by AGA.

**PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS APPLIANCE
AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.**



For use in GB and IE

07/16 EINS 517304

Contents

1. Health and Safety	1
2. Introduction	2
3. Overview	3
Control Panel	4
Gas Hotplate	5
The Grill (Top Oven)	6
The Ovens	6
Simmering Oven	7
4. Cooking Guide	8
5. Cleaning & Caring for your Cooker	10
6. Installation Introduction	12
7. Product Dimensions	13
Location	14
8. Electrical Connection	15
9. Gas Connection	16
10. Circuit Diagram	18
11. Technical Data	19
12. Servicing	20

1. Health and Safety

⚠ CHILDREN SHOULD BE KEPT AWAY FROM THE APPLIANCE AS SOME SURFACES CAN BECOME HOT TO THE TOUCH.

The appliance may contain some of the materials that are indicated below. It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling where applicable, the pertinent parts that contain any of the listed materials that could be interpreted as being injurious to health and safety, see below for information.

Glues and Sealants

Exercise caution - if these are still in liquid form use face mask and disposable gloves.

Glass Yarn, Mineral Wool, Insulation Pads, Ceramic Fibre

May be harmful if inhaled. May be irritating to skin, eyes, nose and throat. When handling avoid contact with skin or eyes. Use disposable gloves, face-masks and eye protection. After handling wash hands and other exposed parts. When disposing of the product, reduce dust with water spray, ensure that parts are securely wrapped.

General

⚠ NEVER place anything aluminium between the saucepan base and the ceramic surface (i.e. cooking mats, aluminium foil, etc).

⚠ IMPORTANT: Oil is a fire risk, do not leave pans containing oil unattended.

- In the event of a fire cover with a lid and switch OFF the electricity.
- Smother the flames on the hob rather than attempting to remove the pan to the outside.
- Burns and injuries are caused almost invariably by picking up the burning pan to carry outside.

Deep Fat Frying

- Use a deep pan, large enough to completely cover the appropriate heating area.

⚠ NEVER fill the pan more than one-third full of fat or oil.

⚠ NEVER leave oil or fat unattended during the heating or cooking period.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children less than 8 years of age shall be kept away unless continuously supervised. Cleaning and user maintenance shall not be made by children without supervision.

⚠ CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

⚠ WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or fire blanket.

⚠ WARNING: Danger of fire: Do not store items on the cooking surfaces.

⚠ WARNING: Accessible parts may become hot during use. Young children should be kept away.

If You Smell Gas

- **DO NOT** turn electric switches on or off
- **DO NOT** smoke
- **DO NOT** use naked flames
- Turn off the gas at the meter or cylinder
- Open doors and windows to get rid of the gas
- Keep people away from the area affected
- Call your gas supplier
- **If you are using Natural Gas in the UK, ring the National Grid on: 0800 111 999.**

2. Introduction

As responsible manufacturers we take care to make sure that our products are designed and constructed to meet the required safety standards when properly installed and used.

Your appliance has a gas hob, electric grill and two electric ovens. The upper oven is an electric simmering oven with an electric grill also incorporated in the roof of the oven.

The lower oven has an electric fan. The fan behind the rear panel ensures an even distribution of heat within the cavity during cooking, ie the temperature at the lowest shelf position is the same as the temperature at the highest shelf position.

Refer to the diagram in the **Overview** chapter to familiarise yourself with the product and refer to the relevant sections for upper oven, lower oven, grill, gas hob etc.

⚠ IMPORTANT NOTICE: PLEASE READ THE ACCOMPANYING WARRANTY.

Any alteration that is not approved by AGA could invalidate the approval of the appliance, operation of the warranty and could affect your statutory rights.

In the interests of safety and effective use, please read the following before using your new AGA appliance.

The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).

Prolonged intensive use of the appliance may call for additional ventilation, for example, opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.

Installation must be to local and national wiring regulations and carried out by a qualified engineer.

A little smoke and some odour may be emitted when first switched on. This is normal and harmless (from oven lagging and starch binder on the element insulation) and will cease after a short period of use.

The appliance, is fitted with a cooling fan, which functions during the use of the grill or top oven (occasionally with the lower oven). The fan will continue to run after the grill/oven has been turned off, until the unit has sufficiently cooled.

Your cooker is supplied with the following accessories:

- 3 Grid shelves, one of which is used as a grill shelf
- 1 Grill pan and grid (for use in the upper oven only)
- 1 Roasting tin
- 1 Baking tray

The following loose parts are also packed with the appliance:

- 2 twin pan supports
- 4 hotplate burner heads
- 4 hotplate burner caps
- 1 burner ring (wok burner)

3. Overview


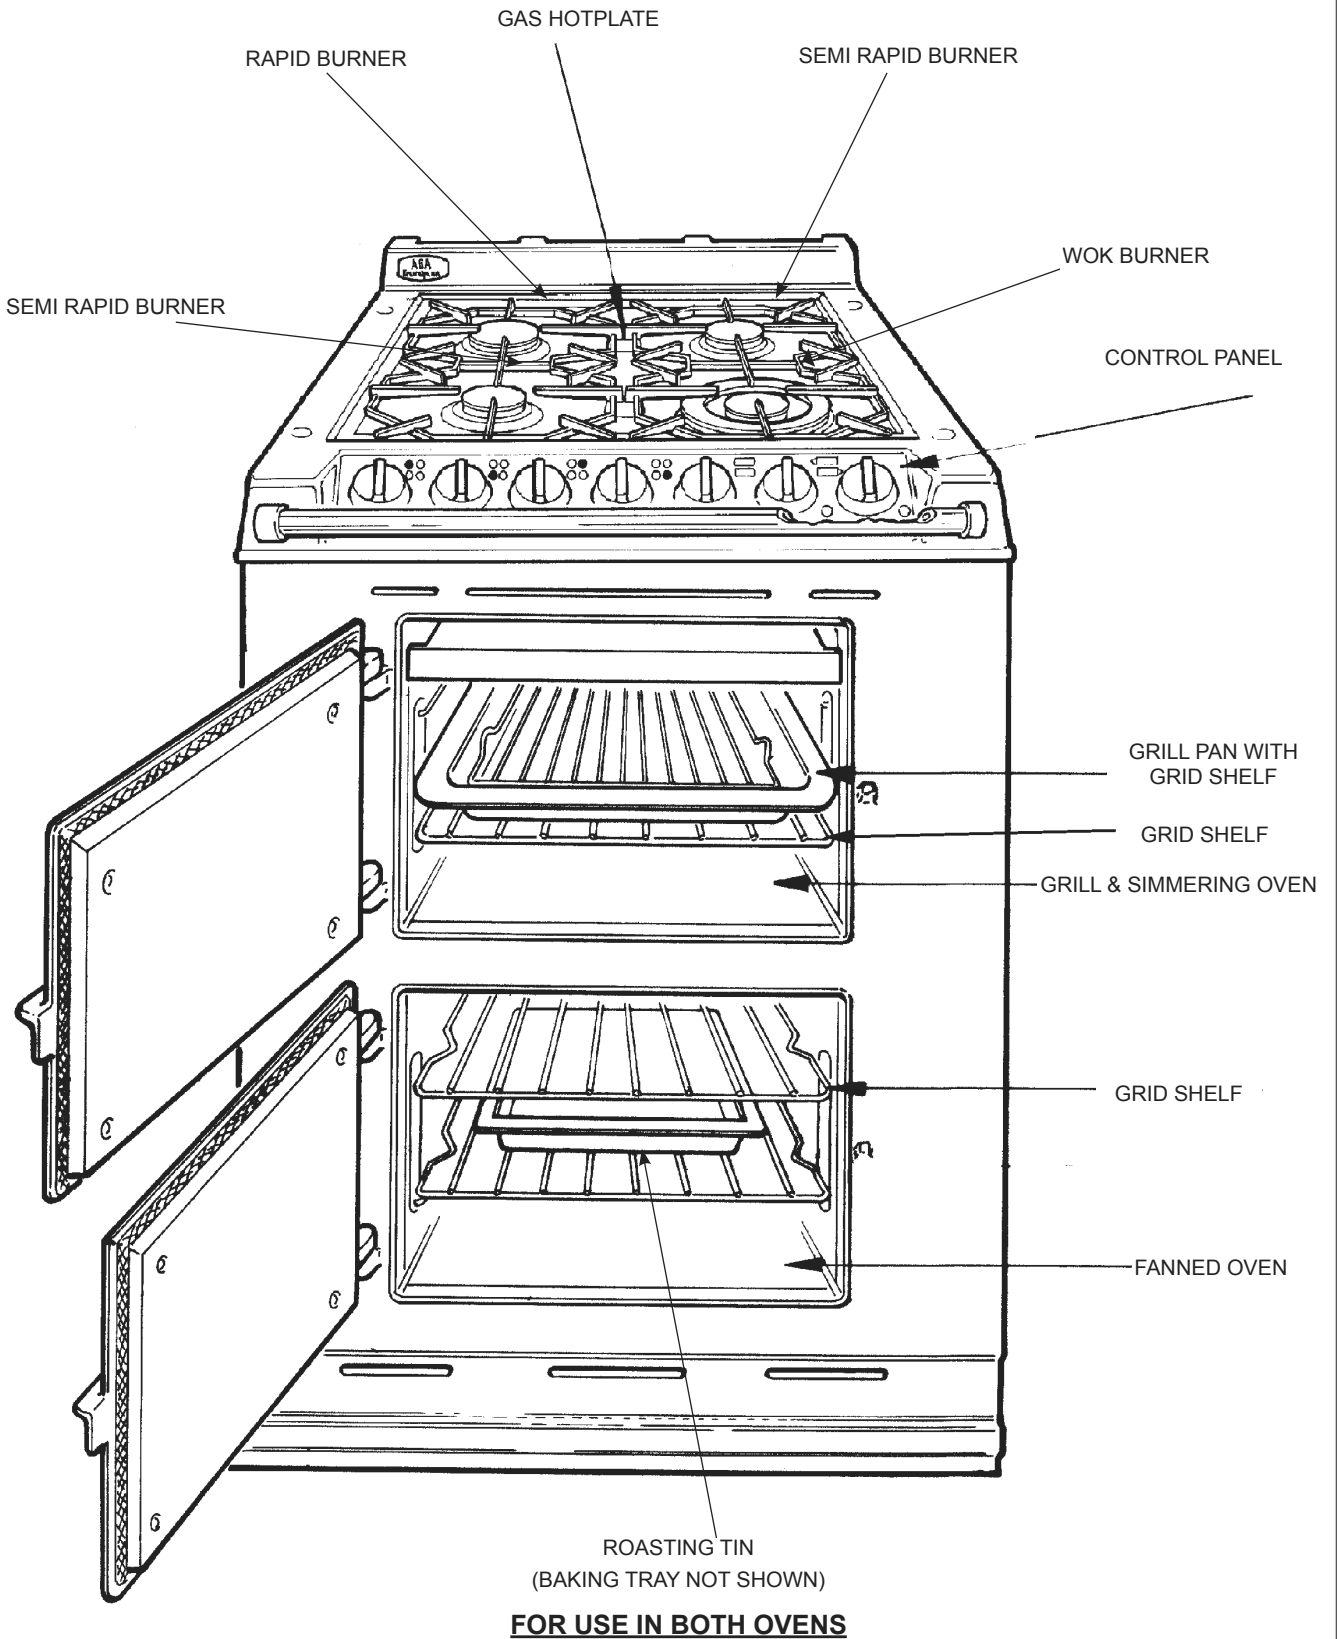


Fig. 3.1

DESN 511629 C

Control Panel

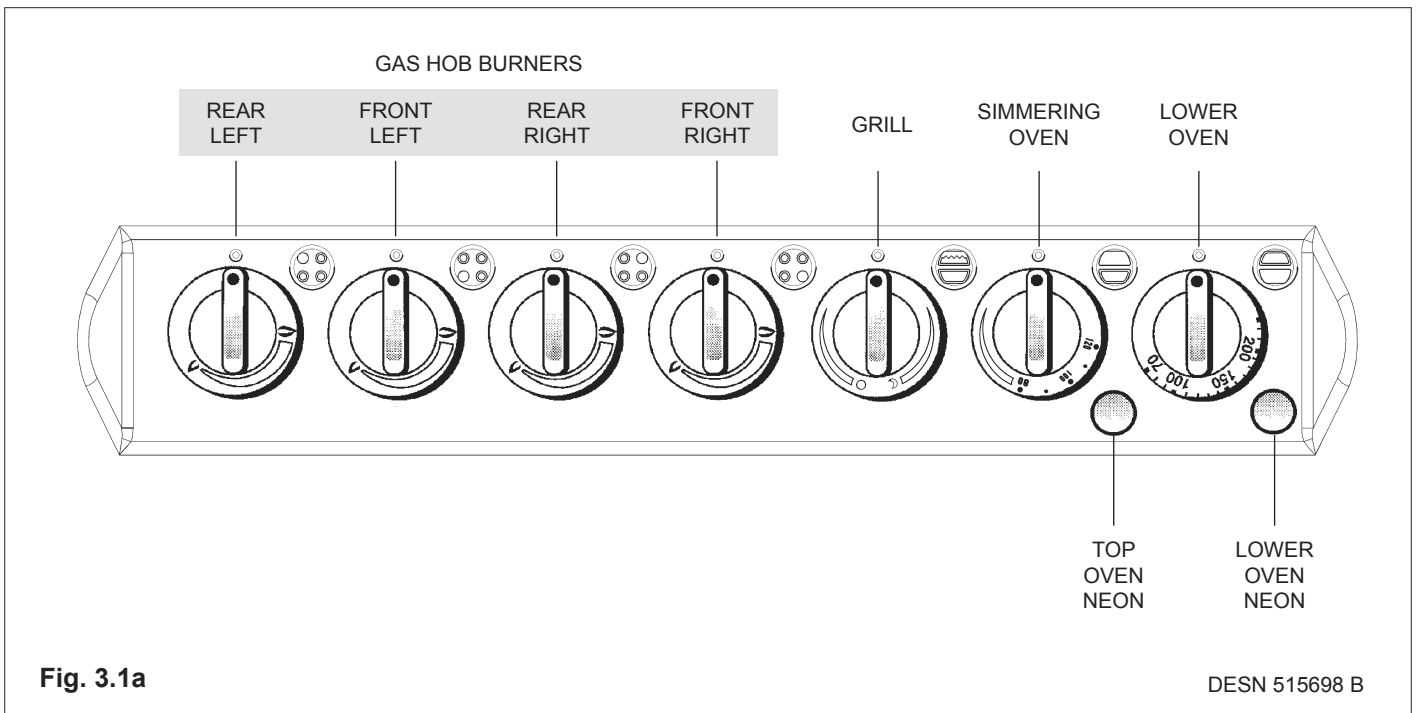

The **GAS HOTPLATE CONTROL KNOBS** have a 'push to turn' action and can only be rotated anti-clockwise from the OFF position:

- **Large Flame Symbol - High Setting**
- **Small Flame Symbol - Low Setting**

The **GRILL ELEMENT KNOB** can be rotated in any direction:

- **Clockwise** both elements on.
- **Anti-clockwise** front elements only.
- The **OVEN KNOBS** can only be rotated clockwise from the OFF position.
- The **OVEN NEONS** illuminate when ovens are switched on. When the temperature required is reached the neon will extinguish.

Gas Hotplate

The hotplate has four gas burners:

- **Rear left** - rapid burner - rated at 3.0 kW
- **Front left and rear right** - semi rapid burners, each rated at 1.75 kW.
- **Front right** - ultra rapid (wok) burner, rated at 3.5 kW.

The semi-rapid burners are especially suited for use with small pans and for gentle simmering or poaching.

All burners have a set simmer position and are easily adjustable.

TO USE THE HOTPLATE

To light a hotplate burner push in and turn the control knobs anti-clockwise to the large flame symbol, and hold in for 3 seconds until the burner lights.

Then turn the knob to the required setting.

If the burner flame should accidentally go out, turn off the burner control and do not attempt to re-light the burner for at least one minute.

The control may be set towards a lower position, simply by turning the control knob towards the small flame symbol.

IMPORTANT: The cast iron pan supports on the appliance are much heavier than those on most gas hotplate cookers, therefore care must be taken when removing or re-fitting them to the hob.

It is important that they are lifted from the appliance and not dragged across nearby enamelled parts which would result in damaging the enamel.

SOME SAFETY POINTS

Simmering aids such as perforated mesh mats are not recommended. They may impede burner performance, damage the pan supports and waste fuel.

Commercially available foil spillage aids are unnecessary on this cooker.

Some Wok cooking pans are unstable. Check with the Wok manufacturer before purchasing.

DO NOT USE unstable and misshapen pans (e.g. with convex bases) that tilt easily.

The minimum pan diameter recommended is 120 mm, maximum recommended is 280 mm.

NEVER use pans which overhang the front fascia.

Place all pans centrally over the burners.

Always position pan handles away from the front of the cooker - away from the reach of small children.

NEVER leave a chip pan unattended.

Pans and kettles with concave bases should not be used.

The Grill (Top Oven)

- ⚠ **The top oven door must be kept open when the grill is on.**
- ⚠ **Caution: Accessible parts may become hot when the grill is in use. Young children should be kept away.**

As with most cookers, depending on how long the grill is on, local surfaces, including the handrail may be hot to touch.

The grill has graduated heat settings on each of 2 elements (see Control Panel).

For best results pre-heat at a high setting.

The large grill pan and grid supplied will fit on any of the three shelf positions.

Most foods should be cooked on the grill grid in the grill pan. You can turn the grid over to suit the different thicknesses of food. You can place some dishes straight onto the oven shelf this is useful when browning the top of food such as cauliflower cheese.

The cooker is supplied with one grid/grill shelf for the top oven.

A cooling fan will run while the grill is in use and for a short period after.

The Ovens

General

The shelves are designed to be non-tilt.

To remove a shelf lift clear of the side notches and slide forward.

To replace a shelf insert into the oven with the short prongs at the rear, facing upwards. Slide into position above the side notches then allow to drop down on the runner.

DO NOT place the grid shelf or food on the base of the ovens. Food will burn on the base of the top oven and air circulation will be affected in the lower oven.

Pre-heat the ovens at the appropriate settings until the neon light goes out.

When cooking in both ovens at the same time you may need to reduce the temperature and cooking times (especially for baked foods).

For effective heat distribution. leave a gap of no less than 12mm between the dishes and the sides of the oven, to allow hot air to circulate.

The grill pan supplied is not designed to fit in the lower oven.

If you also have an AGA **DO NOT** use the small roasting tin provided with the AGA in the Module. Please use utensils provided and place on the grid shelves.

Condensation

Condensation may form on the cooker. This is quite normal and nothing to worry about. The condensation forms when heat and moisture are present, for example during cooking.

Whenever possible try to make sure that food which contains a lot of moisture for example casseroles are covered. If you do notice any condensation, wipe it up straight away.

Simmering Oven

This is used for long, slow cooking over 6-8 hours, keeping food warm and warming plates for short periods.

Extra care must be taken when warming bone china - use the lowest setting.

The slow cooking setting is the area marked between 110°C - 120°C on the oven control knob.

Storage and Reheating of Food

- If food is to be frozen or not served immediately, cool it in a clean container as quickly as possible and then refrigerate or freeze.
- Thaw frozen food completely in the refrigerator before re-heating.
- Re-heat food thoroughly and quickly either on the hotplate or in a hot oven (160°C fan oven), and then serve immediately.



Only re-heat food once.

Using the Simmering Oven Setting

Points to bear in mind when preparing food.

- For best results use the AGA Stainless Steel cookware.
- **DO NOT** place dishes directly onto the oven base. Always place onto shelf supplied.
- Joints of meat and poultry should firstly be cooked at 160° fan oven for 30 minutes, before transferring to the simmering oven.
- The meat/poultry should be entirely wrapped in 2 layers of foil to ensure a tight seal is achieved, this will retain the natural juices and flavours that are lost when food is cooked at a higher temperature. The foil join **MUST** be positioned at the top of the joint to prevent leakage.
- Always stand covered joints on a rack over a meat tin, to allow good air circulation.
- Meat over 2.7kg (6lbs) and poultry over 2kg (4lbs 8ozs) are unsuitable for the slow cooking method.
- This method is unsuitable for stuffed meat and poultry.
- Make sure that pork and poultry reach an internal temperature of at least 75°C.
- Always bring soups, casseroles and liquids to the boil before putting in the oven.
- When cooking casseroles or braising meat cover the food first with foil and then the lid to create a good seal and prevent loss of moisture.
- Joints of meat should be cooked for a minimum of 6 hours. Casseroles and stews will cook within 2 - 4 hours depending on the quantity of ingredients. Food will hold for a further 1 -2 hours but the appearance might deteriorate.
- Egg and fish dishes need only 1-5 hours cooking and should be included in day cooking sessions, where they can be observed from time to time.
- Push dishes well back in the oven to ensure that they are positioned over the element.
- Always thaw frozen food completely before cooking.
- Root vegetables will cook better if cut into small pieces.
- Adjust seasoning and thickenings at the end of the cooking time.
- Dried red kidney beans must be boiled for a minimum of ten minutes, after soaking, and before inclusion in any dish.

4. Cooking Guide

Cooking Hints

- Both ovens must be pre-heated until the light extinguishes.
- The guidelines are for cooking after the oven(s) have reached the desired temperature.
- Larger items may benefit from being turned.
- Shelf positions are counted from the top.
- Put dishes in the centre of the shelf.
- When using both ovens together reduce cooking times and settings.
- It is important to check that food is piping hot before serving.
- You can change the settings and cooking times to suit your tastes.

Deep Fat Frying

- **DO NOT** try to fry too much food at a time, especially frozen food.
- This only lowers the temperature of the oil or fat too much, resulting in greasy food.
- Always dry food thoroughly before frying, and lower it slowly into the hot oil or fat, Frozen foods in particular, will cause frothing or spitting, if added too quickly.
- **NEVER** heat fat, or fry with a lid on the pan.
- Keep the outside of the pan, clean and free from streaks of oil or fat.
- The following charts give a guide to cooking a number of everyday items.

Lower Oven (Fanned)

- The lower oven has a fan, which means the air is circulated to create an even temperature throughout the oven.
- In most cases this means that food requires a lower temperature when cooked in this oven, by approximately 10 - 20°C. Also some baked goods may require a slightly reduced cooking time by a few minutes.
- The cooking charts are a general guide but times and temperatures may vary according to individual recipes.
- The meat sections should be used as a general guide but may vary according to the size, shape of joint on or off the bone.
- Thaw frozen joints thoroughly before cooking them.
- The times are for open roasting. If covered with foil allow extra time.
- The turkey/chicken is cooked when the juices run clear when pierced with a skewer. If the juices are still pink continue to cook checking every 15 minutes until juices run clear.
- 1kg = 2.2lb

Lower Oven (Fanned) - Cooking Table

Food	Setting °C	Shelf Position	Approximate Cooking Time	
Roasting Meat				
Beef	170	2 or 3	Rare	35 mins per kg plus 15 mins
	170	2 or 3	Medium	45 mins per kg plus 20 mins
	170	2 or 3	Well Done	55 mins per kg plus 30 mins
Lamb	170 - 180	2 or 3	Well Done	55 mins per kg plus 20 mins
Pork	170 - 180	2 or 3	Well Done	1 hr 5 mins per kg plus 25 mins
Poultry				
Chicken	180 - 190	2 or 3		45 mins per kg plus 15 mins
Turkey	170	3	Up to 4kg	40 mins per kg plus 10 mins
			Over 4 kg	30 mins per kg plus 20 mins
Yorkshire Pudding				
Large	190 - 200	Any		25 - 40 mins
Individual	190 - 200	Any		15 - 25 mins
Cakes & Biscuits				
Shortbread	140	2 or 3		45 - 50 mins
Very Rich Fruit Cake	120 - 130	3		3 - 4 hrs
Fruit Cake	140 - 150	3		1 - 2 hrs
Small Cakes	180	Any		15 - 25 mins
Scones	200	Any		8 - 12 mins
Victoria Sandwich	170	Any		20 - 35 mins
Swiss Roll	200	2		10 mins
Biscuits	170 - 180	Any		10 - 15 mins
Tray Bakes	170	3		25 - 30 mins
Pastries				
Plate Tart	190	2 or 3		25 - 35 mins
Fruit Pie	190	2 or 3		25 - 45 mins
Mince Pies	190	1 & 3		20 - 25 mins
Vol-au-Vents (frozen flaky)	210	1 & 3		15 - 20 mins
Eclairs / Profiteroles	200	2		20 - 25 mins depending on size
Puddings				
Milk Puddings	140	Any		2 hrs approx.
Baked Sponges	160 - 170	2 or 3		45 - 60 mins
Baked Custards	140	2 or 3		45 - 55 mins
Meringues	90	2 or 3		1.5 - 3 hrs depending on size
Apple Crumble	170	3		30 - 40 mins
Yeast Mixtures				
Bread	200	2 or 3		25 - 35 mins
Rolls and Buns	200	2 or 3		10 - 20 mins
Souffle				
Cheese Souffle (Individual)	190	3		20 - 25 mins
Cheese Souffle (Large)	190	3		25 - 35 mins

5. Cleaning & Caring for your Cooker

- ⚠ Always SWITCH OFF at mains before cleaning.
- ⚠ DO NOT use a steam cleaner to clean this cooker.
- ⚠ When cleaning use as little water as possible.
- ⚠ DO NOT use abrasive pads, oven cleaner or cleaners containing citric acid on enamelled surfaces.
- ⚠ DO NOT use hob brite on the enamelled surfaces.

Enamelled Top and Front Plate

- ⚠ The easiest way to clean the AGA top plate and front plate is to mop up spills as they happen. VEA approved AGA Enamel Cleaner can be purchased from www.agacookshop.co.uk.
- ⚠ Baked on food is more difficult to clean but can usually be removed with proprietary vitreous enamel cleaners or mild cream cleaners using a cloth, or if necessary, a nylon scouring pad and can be purchased from www.agacookshop.co.uk.
- ⚠ If milk or fruit juice, or anything containing acid is spilt on the enamel, wipe off immediately.
- ⚠ Clean off any condensation streaks on the front plate around the oven doors or vitreous enamel maybe permanently discoloured.
- ⚠ All that is usually needed to keep the vitreous enamelled surfaces of your cooker bright and clean is a daily rub over with a damp, soapy cloth followed immediately with a clean, dry cloth to avoid streaks.
- ⚠ Remember the top plate will scratch if pans or utensils are dragged across them.

Gas Hotplate

- ⚠ If spillage does occur on a burner cap or pan support, move pan to another burner and when cool, clean in hot soapy water.
- ⚠ After cleaning, be sure all parts are dry. When fitting the burner cap and burner head, make sure that the hole in the burner head is correctly located over the ignition electrode (see Fig. 5.1), and that the burner cap is sitting correctly on the burner head.
- ⚠ The ignition electrode must not be displaced or damaged otherwise spark ignition will be affected.
- ⚠ The hotplate top is sealed. To clean, remove pan supports and wipe over visible surface.
- ⚠ NOTE: The following parts MUST NOT be cleaned in a dishwasher, as this could cause damage or discolour the finish:- pan supports, burner caps burner ring and burner head.
- ⚠ Aluminium pans may cause metallic marking on the pan supports. This will not affect the durability of the enamel.
- ⚠ NOTE: The appliance guarantee does not cover the mis-use of the pan supports.

The Ovens

- ⚠ The fan oven is fitted with a back panel which is of self cleaning enamel and should not be scoured.
- ⚠ All the remaining surfaces of both ovens are vitreous enamelled and can be cleaned with proprietary vitreous enamel cleaners approved by the Vitreous Enamel Association.
- ⚠ The shelves can be removed and if necessary the shelf supports may also be removed by taking out the screws.
- ⚠ These items may be washed in the sink with normal oven cleaners, you may use a fine wool soap pad for removing stubborn stains from the oven bases and shelf supports.
- ⚠ Note: take care not to damage the thermostat phials in the ovens when cleaning.

Heat Clean Enamel

- ⚠ Fan oven - back panel only
- ⚠ This special enamel has a continuous cleaning action, which works best if a pattern of low and high temperature cooking is followed. By using low temperature roasting, excessive fat splashes can be avoided. Should any excessive staining occur, immediately clean the area with hot water containing detergent, and a nylon washing-up brush. Resistant stains require the oven to be run at 210°C for 2 hours.
- ⚠ Do not use any cleaning materials which may clog the pores of the special coating e.g. pastes and powders, soap filled pads, spray cleaners, brush-on oven cleaners, caustic solutions, metal scrapers/knives, and prevent the cleaning action.

Door Liners

- ⚠ May be cleaned with a cream cleaner or soap impregnated pad.
- ⚠ Lift off the oven doors to allow them to cool a little before cleaning. DO NOT, however, immerse the doors in water as they are packed with insulating material which will be damaged by excessive moisture.

Controls

- ⚠ The enamelled surface under the knobs can be treated as in the Section 'Door Liners'. Avoid the use of excessive water.
- ⚠ DO NOT use oven cleaners, scouring pads and abrasive powder for cleaning the plastic knobs. A wipe with a damp cloth should be sufficient.
- ⚠ TIP: Clean your Module regularly. Preferably every time you use it.
- ⚠ IMPORTANT: AGA recommend Vitreous Enamel Association approved cleaners for cleaning the vitreous enamelled surfaces of this product.

Accessories

- ⚠ Oven furniture such as Roasting Tins, Solid Plain Shelves, Grid Shelves, and Grill Racks should be cleaned in hot soapy water, soak if necessary, a nylon scouring pad can be used.

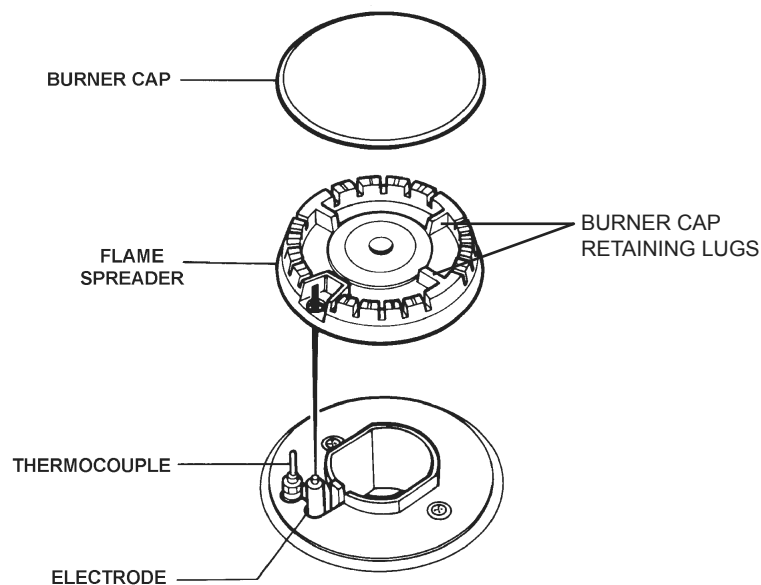


Fig. 5.1

DESN 513513

6. Installation Introduction

⚠ Read the instructions before installing or using this appliance.


⚠ **WARNING: This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance.**

- Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- The adjustment conditions for this appliance are stated on the data plate.
- The data plate is situated in the centre vent slot near the base of the front plate.
- This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation (B.S. 5440 Part 2).
- It should be in accordance also with any relevant requirements of the Gas Region and Local Authority.
- In your own interest, and that of safety to comply with the law, all gas appliances must be installed by a competent person. Failure to install appliances correctly could lead to prosecution.
- On completion, test the gas installation for tightness.


⚠ **WARNING: THIS APPLIANCE MUST BE EARTHED.**

- The appliance is designed for the voltage stated on the data plate.
- The Freestanding Module is supplied from the manufacturers in a fully assembled and tested condition.
- Final installation is undertaken on site by an authorised AGA Engineer.

7. Product Dimensions

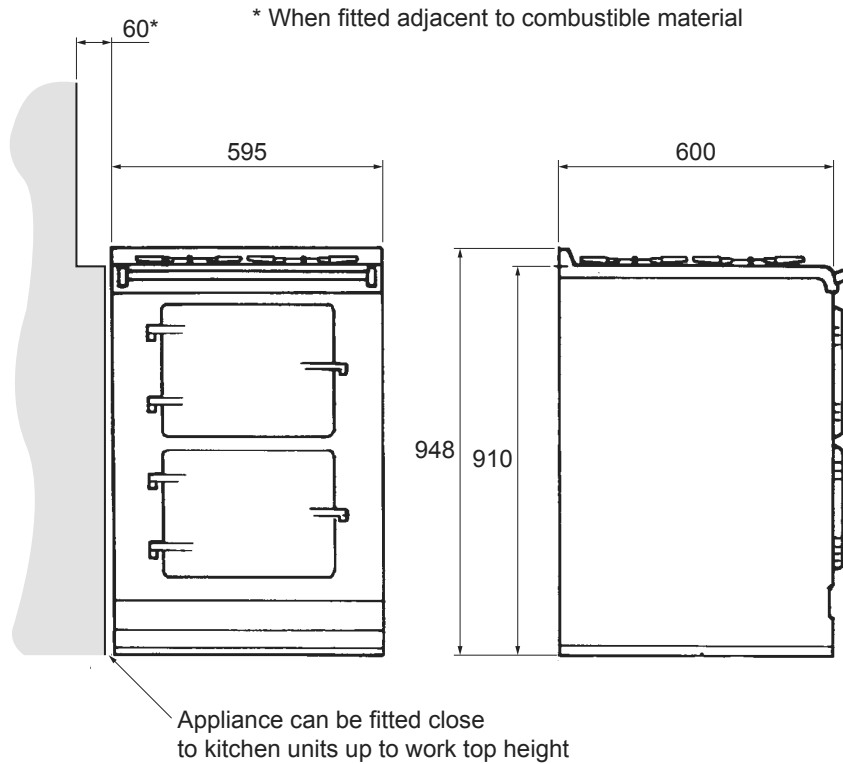

DESN 511616 B

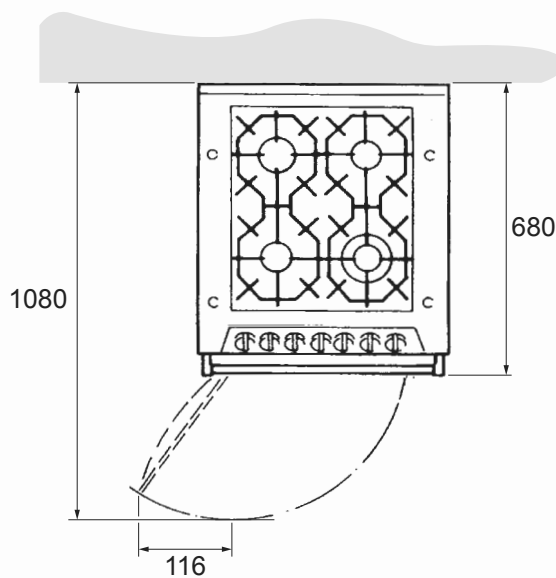

DESN 511616 A

All dimensions in mm
DESN 511616

Fig. 7.1

Location

This is a CLASS 1, type X appliance.

Any side wall above the hob on either side shall be greater than 60 mm horizontally from the cooker only when adjacent to combustible material (**Fig. 7.1**).

Surfaces over the top of the cooker must not be closer than 650 mm.

The vent slots in the back of the top plate must not be obstructed.

Installation/Levelling

The AGA Freestanding Module is designed to stand on a flat and level surface, however, any unevenness may be overcome by packing under the corners of the plinth with a suitable non combustible material, (up to 2-3 mm).

If a supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

A minimum clearance of 1000 mm must be available at the front of the cooker, to enable it to be serviced.

It is recommended that the cooker is not installed on a raised base.

It is recommended that any soft material flooring is removed from where the Module will be installed.

DO NOT install behind a decorative door in order to avoid overheating.

8. Electrical Connection

Electrical connections are located at the back of the appliance.

Refer to **Fig. 8.1** for wiring connection to the appliance.

Remember that an excess of cable length is required for the possible withdrawal of the cooker.

The total electrical load of the appliance is approximately 3.5kW. The cable size used should be suitable for this load and comply with all local requirements (i.e. PVC Insulated Cable IEC 60227 - code 53 for ordinary cables).


Always double check connections and ensure terminals are fully tightened and the cable is secured to the cable clamp.

⚠ The isolator should not be positioned immediately above the Module, but must be sited within 2 metres of the appliance.


The Module requires a 30/32 amp power supply fitted in conjunction with a double pole isolator with a minimum contact clearance of 3 mm and be connected to the mains with a minimum 4 mm² cable to comply with the latest editions of the local and national wiring regulations.

SINGLE PHASE CONNECTION -

Minimum 4 mm² and must comply with the latest editions of the local and national wiring regulations

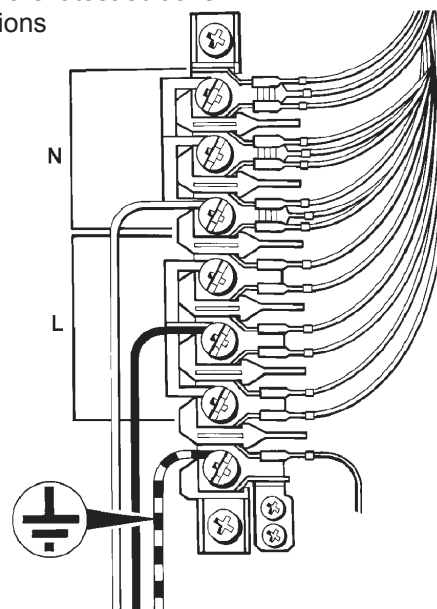

DESN 513370

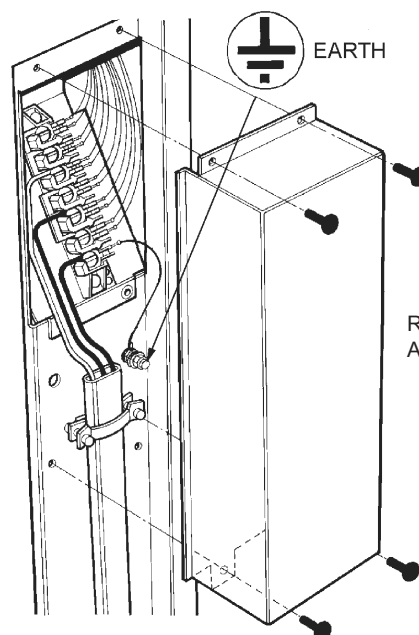

REMOVE COVER (4 SCREWS) TO GAIN ACCESS TO THE MAINS TERMINAL

Fig. 8.1

DESN 513372 A

9. Gas Connection

This cooker can be installed with an approved appliance flexible connection.

Supply piping should not be less than R 1/2 (1/2" BSP).

Connection is made to the R 1/2 (1/2" BSP) female threaded entry in the inlet block located just below the hotplate level on the rear left-hand side of the cooker.

Check for gas tightness after connecting the gas supply.

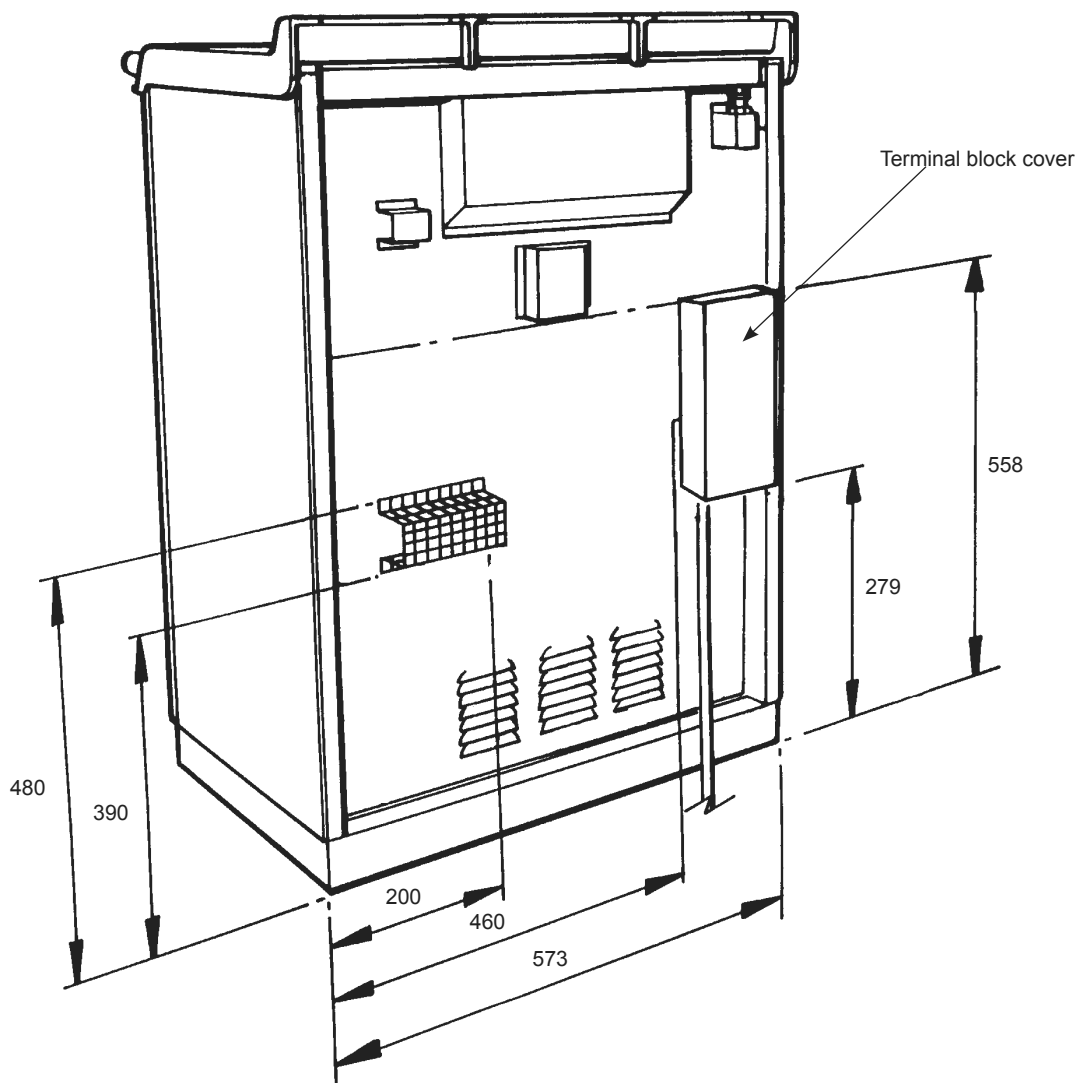


Fig. 9.1

DESN 511751

The gas bayonet connector must be fitted in the shaded area indicated in **Fig. 9.2**. Take into account that it must be possible to pull the cooker forward sufficiently. Ensure flexible hose is not trapped between electric cover and rear wall. Ensure hose is routed within shaded area, and away from shielded oven vent.

The flexible hose must be in accordance with the relevant standards.

NOTE: FOR L.P.G. APPLIANCE

The flexible hose must be suitable for use with Propane gas, capable of 70°C temperature rise, and carry a red stripe, band or label. If in doubt contact your supplier.

POSITION OF GAS BAYONET ON WALL (locate in shaded areas)

⚠ IMPORTANT: The gas supply connection at the wall must not project from the wall by more than 45 mm, so that it does not foul with the back of the cooker.


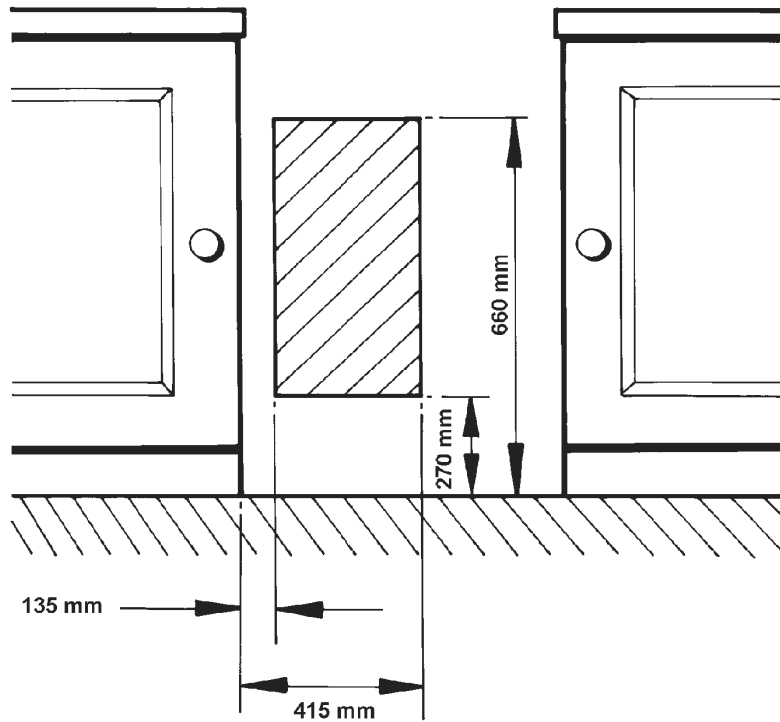


Fig. 9.2

DESN 513507

10. Circuit Diagram

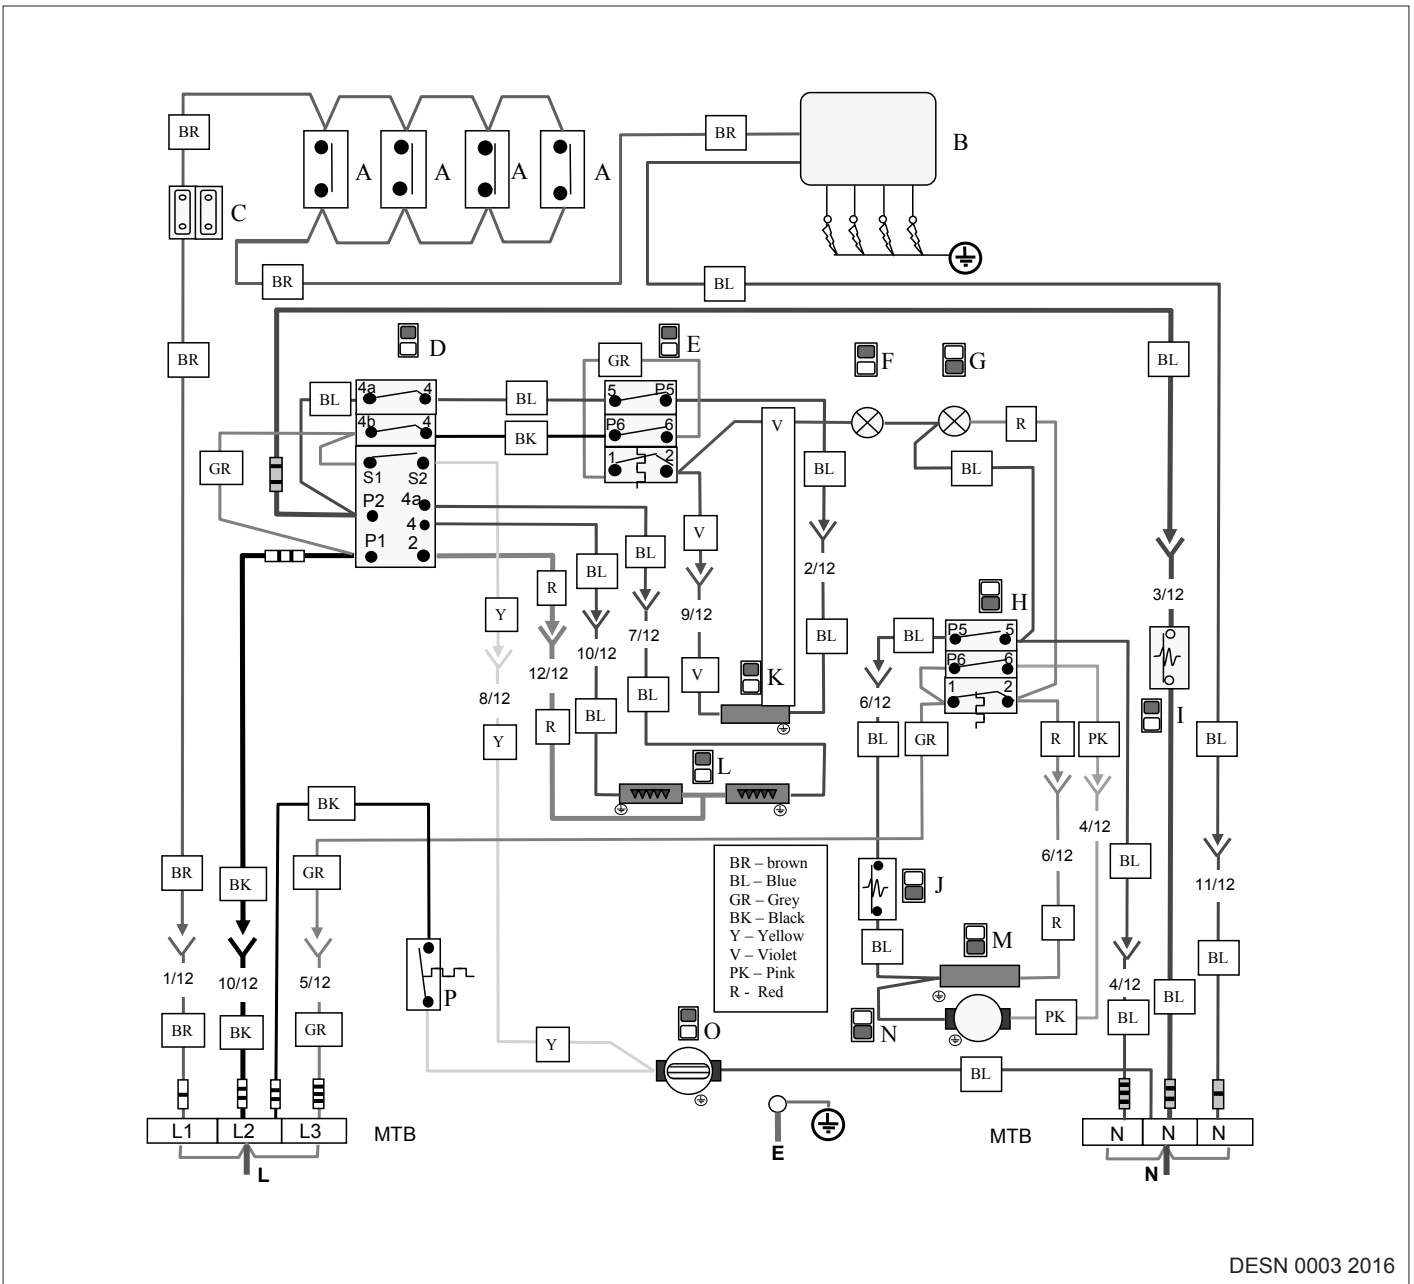

- A. Gas Tap Ignition Switch
- B. Spark Generator
- C. 2 Way Terminal Block
- D. Grill Regulator
- E. Top Oven Thermostat
- F. Top Oven Neon
- G. Bottom Oven Neon
- H. Bottom Oven Thermostat
- I. Top Oven Overheat Thermostat
- J. Bottom Oven Heat Thermostat
- K. Top Oven Element Thermal Switch
- L. Dual Grill Element
- M. Bottom Oven Element
- N. Bottom Oven Circulation Fan
- O. Grill Cooling Fan
- P. Grill Cooling Fan 'Run On' Thermal Switch
- MTB Master Terminal Block

Code	Colour
BR	Brown
BL	Blue
GR	Grey
BK	Black
Y	Yellow
V	Violet
PK	Pink
R	Red

11. Technical Data

The cooker is category II₂H₃+

It is supplied set for group H natural gas. A conversion kit from Natural Gas to LPG is available.

HOTPLATE - Natural Gas G20

	Right-hand Front	Left-hand Rear	Right-hand Rear	Left-hand Front
BURNER TYPE	ULTRA-RAPID	RAPID	SEMI-RAPID	SEMI-RAPID
MAXIMUM HEAT INPUT	3.5 KW	3.0 KW	1.75 KW	1.75 KW
INJECTOR MARKING	130	116	097	097

PRESSURE POINT POSITION: Rear Left-hand side of the appliance, at hotplate level

PRESSURE SETTING: 20 mbar (2 kPa)

BURNER IGNITION: H.T. Spark

L.P. Gas G30/G31

	Right-hand Front	Left-hand Rear	Right-hand Rear	Left-hand Front
BURNER TYPE	ULTRA-RAPID	RAPID	SEMI-RAPID	SEMI-RAPID
MAXIMUM HEAT INPUT	3.5 KW (250 g/h) (0.50 l/h)	3.0 KW (214 g/h) (0.42 l/h)	1.75 KW (125 g/h) (0.25 l/h)	1.75 KW (125 g/h) (0.25 l/h)
INJECTOR MARKING	95	85	65	65

PRESSURE POINT POSITION: Rear Left-hand side of the appliance, at hotplate level

PRESSURE SETTING: G30: 28-30 mbar G31: 37 mbar (Butane - Propane G30/G31 @ 28 kPa South Africa)

BURNER IGNITION: H.T. Spark

ELECTRIC GRILL AND OVENS

GRILL ELEMENT POWER RATING - 2 x 1.05 kW

TOP OVEN POWER RATING - 1.0 kW

LOWER OVEN (FANNED) - 1.4 kW

12. Servicing

- In the event of requiring maintenance, please call AGA Service or your authorised distributor.
- Your cooker must only be serviced by a qualified engineer from AGA or an authorised distributor.
- **DO NOT** alter or modify the cooker.

Spare Parts

To maintain optimum and safe performance, we recommend that only genuine AGA spare parts are used. These are available from most major spares stockists, including ourselves.

**For further advice or information contact
your local AGA Specialist.**

With AGA Rangemaster's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliances described and illustrated at any time.



Manufactured By
AGA Rangemaster
Station Road
Ketley Telford
Shropshire TF1 5AQ
England

www.agaliving.com
www.agacookshop.co.uk